




FITTING INSTRUCTIONS FOR FP0068BK FORK PROTECTORS KAWASAKI Z750 2007

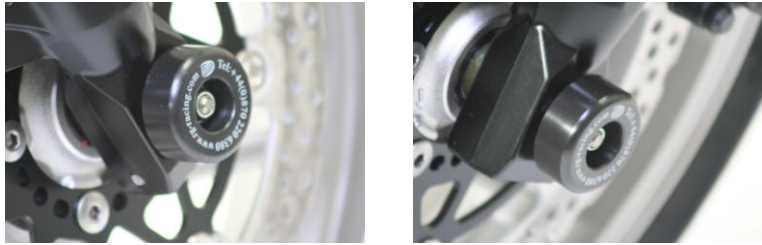

Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike

Please note that in cases where kits are packed with rubber washers holding the components onto the bolt – *the rubber washers should be thrown away!*

Please read all instructions before commencing fitting

- Fit one nut and washer to spindle bar until the thread tightens on plastic of loc nut.
- Pass the bar through one of the protectors so that the nut sits in the counter bore.
- Position spacer with larger spigot diameter up to flat face of bobbin with spigot facing away from the protector.
- Push assembly through front wheel spindle from right hand side as you sit on bike so spigot locates in hexagonal hole.
- Place other spacer on spindle bar protruding from other side of spindle so smaller spigot locates in front wheel spindle bore.
- Put other protector on spindle bar with flat face against spacer
- Fit washer and nut and tighten until it locks. **DO NOT OVERTIGHTEN.** The nyloc nuts will hold it tight.

CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

R&G RACING RETURNS POLICY (NON-FAULTY GOODS)

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in resellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.

R&G Racing

Unit 5K, Blacknest Industrial Park, Blacknest Road, Alton, Hampshire, GU34 4PX

Tel: +44 (0)870 220 6380 Fax: +44 (0)1420 521101 www.rg-racing.com Email: info@rg-racing.com



FRANCE
INSTRUCTIONS DE MONTAGE DE LA PROTECTION DE FOURCHE
FP0068BK
KAWASAKI Z750 2007

Merci de noter que les pièces assemblées dans l'emballage ne sont pas nécessairement dans le sens du montage à réaliser sur la moto.

- Placer les entretoises sur l'axe de roue avant (attention au sens de montage)
 - Pousser la barre R&G à travers les deux entretoises.
 - Placer les tampons de chaque côté de l'axe.
 - Glisser une rondelle de chaque côté et placer ensuite un écrou autobloquant de chaque côté.
 - A l'aide de deux clés, serrez les deux écrous simultanément.
 - Ne pas serrer trop fortement, en effet les écrous autobloquants vont garder le montage en place.
-
- Fit one nut and washer to spindle bar until the thread tightens on plastic of loc nut.
 - Pass the bar through one of the protectors so that the nut sits in the counter bore.
 - Position spacer with larger spigot diameter up to flat face of bobbin with spigot facing away from the protector.
 - Push assembly through front wheel spindle from right hand side as you sit on bike so spigot locates in hexagonal hole.
 - Place other spacer on spindle bar protruding from other side of spindle so smaller spigot locates in front wheel spindle bore.
 - Put other protector on spindle bar with flat face against spacer
 - Fit washer and nut and tighten until it locks. **DO NOT OVERTIGHTEN.** The nyloc nuts will hold it tight.